 


# “Word” operation printing

## 1. Open computer settings

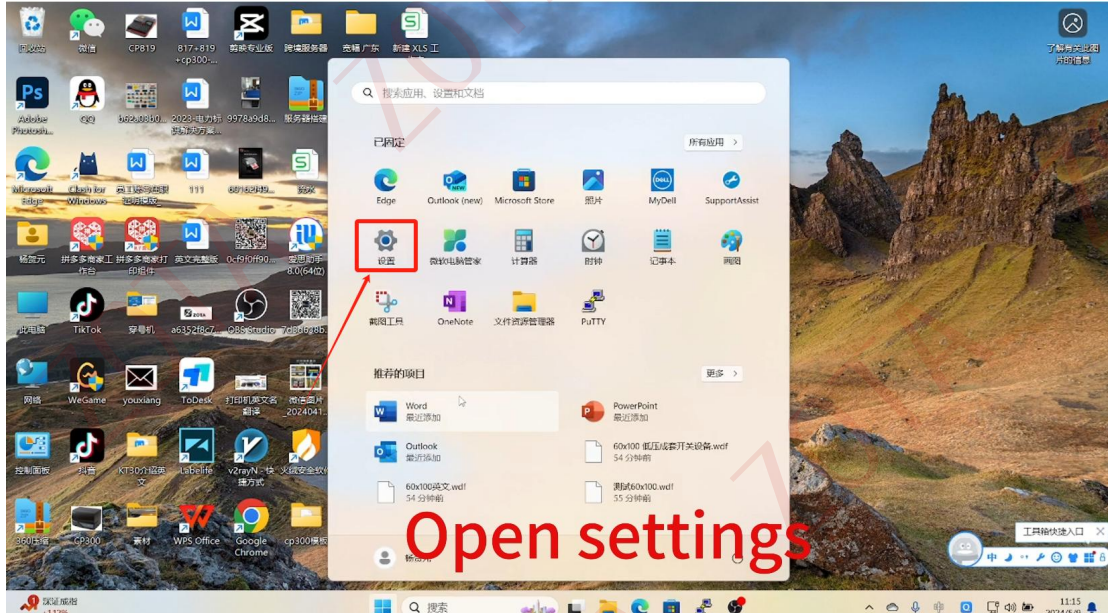

## Find printer CP300

 
 




Click on Printing Preferences



# Add the specifications you need

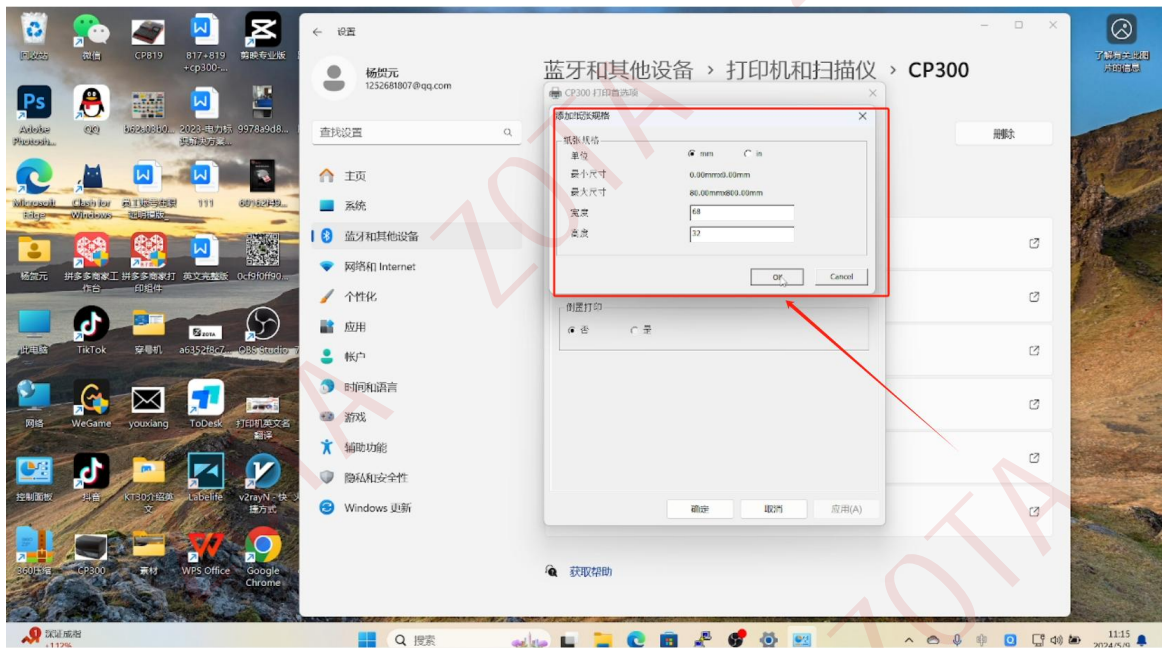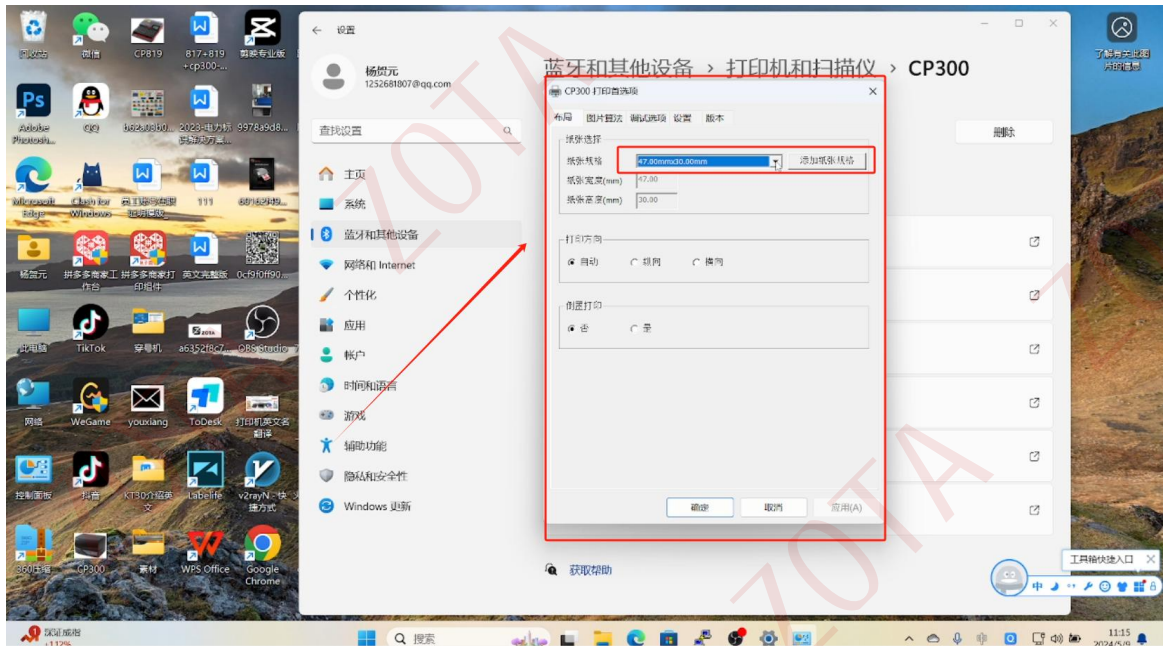 


In the settings, you can choose the card thickness, card type, and print density.

 


2. After setting up, open Word and create a new blank document.

Click Layout, select margins, customize margins, and adjust all to 0.

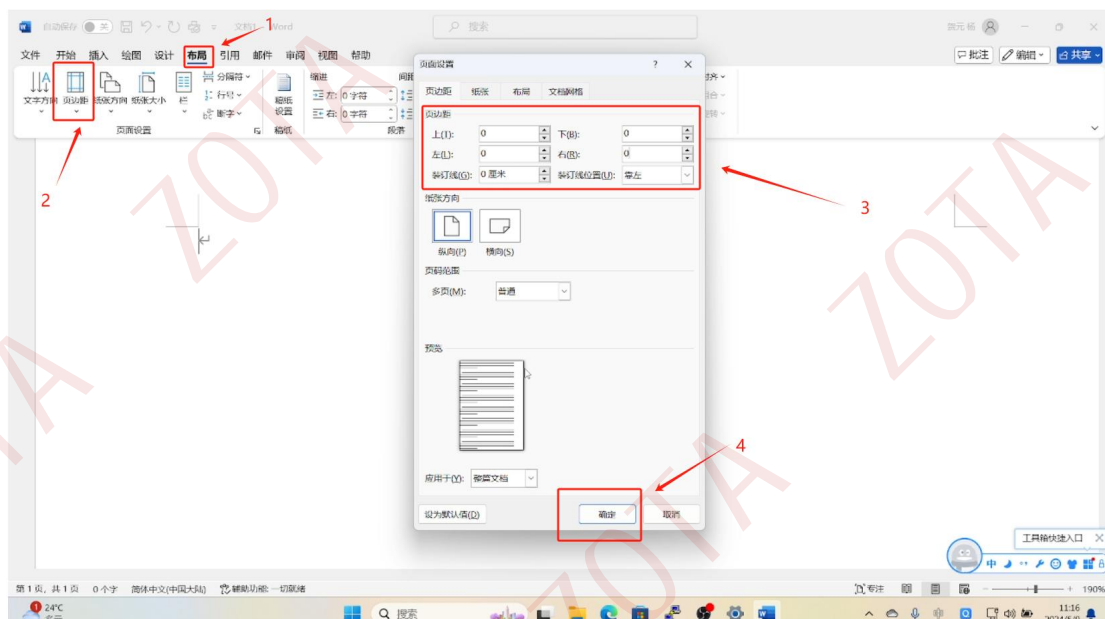

Click Paper Size, customize the paper size, enter the size set by the printer, and click OK.

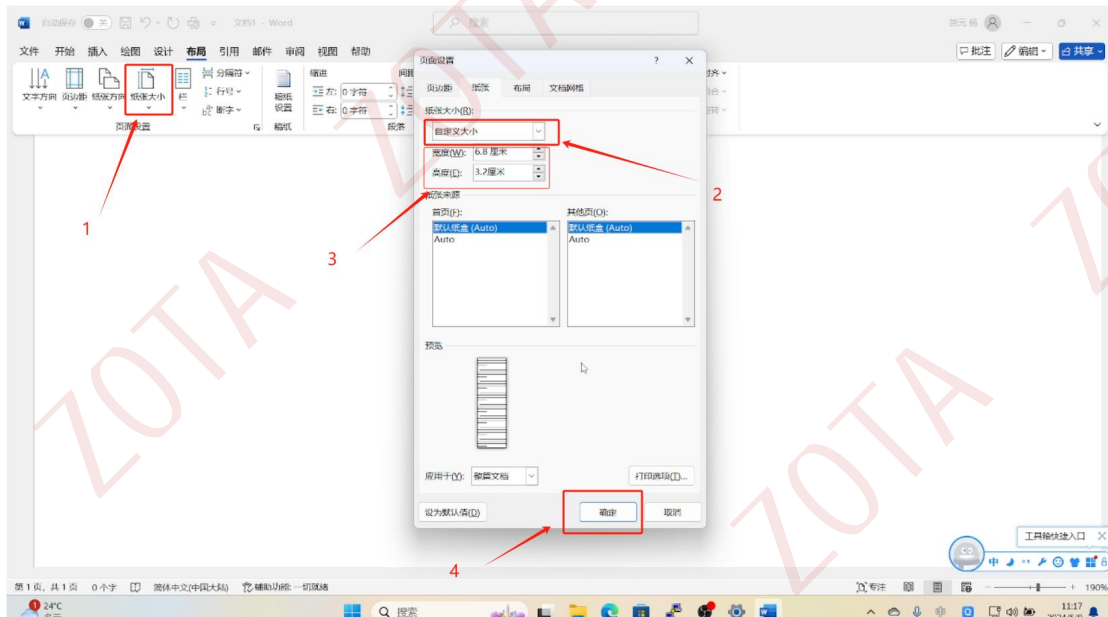

Enter the required content and click print.

